



Blink Clicking on at Startup	Blink clicking is enabled automatically when Quick Glance is started. If not checked, blink clicking can be enabled using the Eye Tools toolbar. Note: Dwell on Startup and Blink Clicking on Startup cannot be selected at the same time.
Allow Left Double Click on Very Slow Blink	A left double click is performed when both eyes are closed longer than the Blink Capture Interval .
Beep with Blink or Dwell	A beep will indicate when a blink or dwell click is performed.
Allow Blink Click without Moving Cursor	Allows Quick Glance to be used for blink clicking only. Blink click can be used as a switch with scanning software. No eyegaze tracking is performed.
Require both eyes to click	A click is performed only when both eyes are closed longer than the Blink Capture Interval . If not checked, a click is performed when either eye or both eyes are closed longer than the Blink Capture Interval .
Blink Capture Interval	The time required for the eye(s) to be closed for a click to be performed. Involuntary blinks will not register as clicks because the eyes open in a shorter amount of time.
Blink Timeout Interval	The time required for the eye(s) to re-open for a click to be performed. A click will not be performed if the eye(s) is (are) closed longer the time set.
Dwell Box Size	The box size the gaze is required to stay inside in order for a dwell click to be performed. The units are millimeters for a 17-inch monitor
Slow Dwell Interval	The time required for the gaze to remain in the Dwell Box in order for a click to be performed. This is only used if dwell clicking is enabled.
Dwell on Startup	Dwell clicking is enabled automatically when Quick Glance is started. If not checked, dwell clicking can be enabled using the Eye Tools toolbar. Note: Dwell on Startup and Blink Clicking on Startup cannot be selected at the same time.
Mouse Click Delay	The amount of time that the cursor position is frozen after performing a click. If clicks are not consistently registering, this number may need to be increased.
Confirm on at startup	Click Confirm is enabled automatically when Quick Glance is started. If not checked, Click Confirm can be enabled using the Eye Tools toolbar.